



Air Suspension Air Filter (64.50.12)

Removal


- 1 . Open the liftgate and tailgate.
- 2 . Remove the spare wheel and tire.
- 3 . Remove the 4 nuts securing the LH rear tail pipe heat shield.

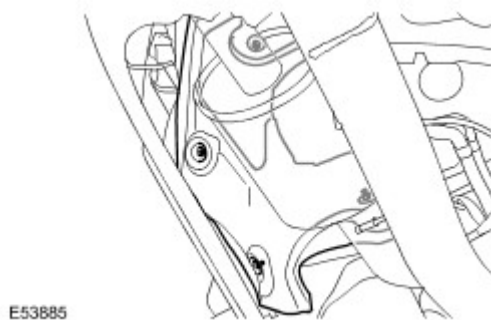

- 4 . Reposition the LH rear tail pipe heat shield.
- 5 . Disconnect the air suspension intake filter pipe.
- 6 . Detach the air suspension intake filter.
 - ▶ Release the grommet.
 - ▶ Release from the clip.

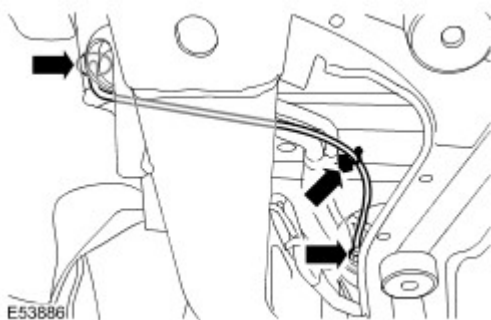

- 7 . Remove the LH lower rear quarter trim access panel.

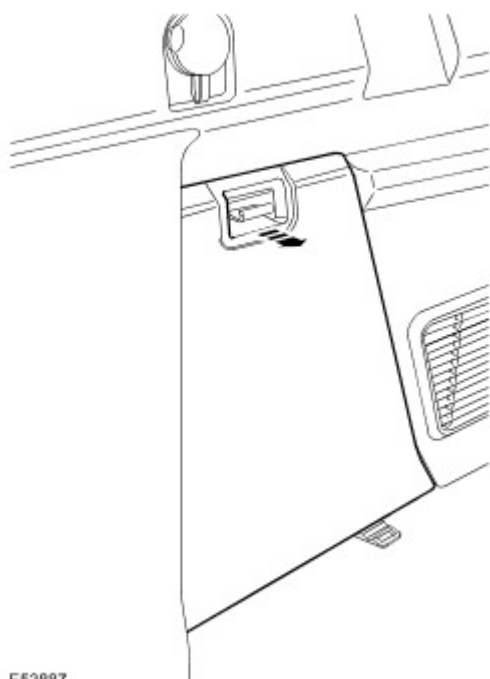


8 . Remove the air suspension intake filter.



Installation

- 1 . Install the air suspension intake filter.
 - ▶ Install the grommet.
- 2 . Install the LH lower rear quarter trim access panel.
- 3 . Attach the air suspension intake filter.
- 4 . Connect the air suspension intake filter.

5 . Reposition the LH rear tail pipe heat shield.

 Install the nuts.

6 . Install the spare wheel and tire.

7 . Close the liftgate and tailgate.