


Air Suspension Compressor (60.50.10)

Removal


1. Using T4, depressurize the air suspension. For additional information, refer to [Air Suspension System Depressurize and Pressurize \(60.50.38\)](#) (Section 204-05)

2.  **WARNING: Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.**

Raise and support the vehicle.

3. Remove the air suspension compressor lower cover.


- ▶ Remove the 3 bolts.
- ▶ Release the 5 clips.

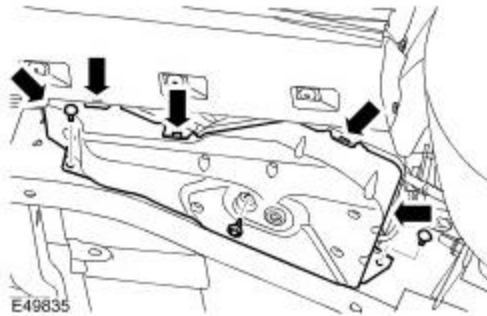

4.  **CAUTION: Always plug any open connections to prevent contamination.**

Remove the air suspension compressor.

- ▶ Disconnect the 3 air lines.
- ▶ Disconnect the 2 electrical connectors.
- ▶ Remove the 3 bolts.

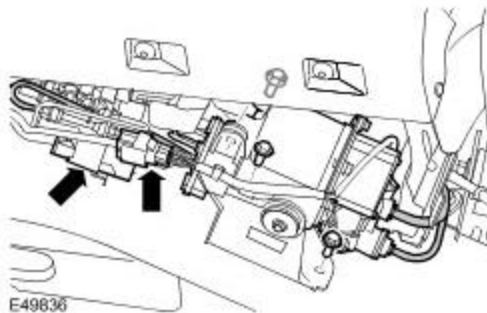

Installation

- 1.



CAUTION: Make sure that the wiring harness and the air suspension pipes are not trapped behind the air suspension compressor bracket.



CAUTION: Make sure the air suspension compressor upper cover is correctly positioned.

NOTE:

Install the upper retaining bolt first.

Install the air suspension compressor.

- ▶ Tighten the bolts to 10 Nm (7 lb.ft).
- ▶ Connect the air lines.
- ▶ Connect the electrical connectors.

2. Install the air suspension compressor lower cover.

- ▶ Install the bolts and tighten to 9 Nm (7 lb.ft).

3. Using T4, pressurize the air suspension. For additional information, refer to [Air Suspension System Depressurize and Pressurize \(60.50.38\)](#) (Section 204-05)