


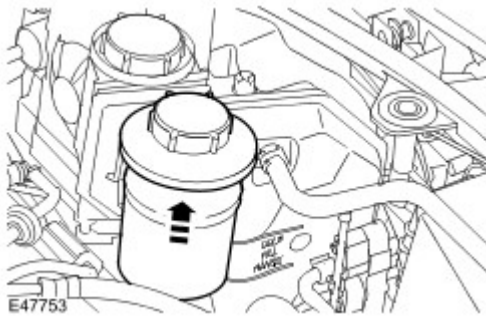


Fuel Fired Booster Heater (80.40.01)

Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Drain the cooling system. For additional information, refer to (Section 303-03)
3. Remove the front LH fender splash shield. For additional information, refer to (Section 501-02)
4. Release the power steering fluid reservoir.



5. Remove the fuel fired booster heater exhaust bracket.
 - ▶ Remove the bolt.

6.  **CAUTION: Before disconnecting or removing components, ensure the area around the joint faces and connections are clean. Plug open connections to prevent contamination.**

Disconnect the fuel fired booster heater fuel line.


- ▶ Release the clip.



7. Disconnect the fuel fired booster heater inlet and outlet coolant hoses.
 - ▶ Release the 2 clips.



8. Remove the fuel fired booster heater.
 - ▶ Disconnect the 2 electrical connectors.
 - ▶ Remove the 3 bolts.
 - ▶ Release the fuel pipe from the clip.

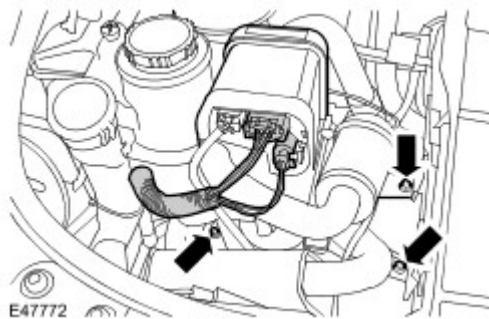

Installation

1. Install the fuel fired booster heater.
 - ▶ Tighten the bolts to 10 Nm (7 lb.ft).
 - ▶ Connect the electrical connectors.
 - ▶ Secure the fuel pipe in the clip.
2. Connect the fuel fired booster heater coolant hoses.
 - ▶ Secure with the clips.
3. Connect the fuel fired booster heater fuel hose.
 - ▶ Secure with the clip.
4. Install the fuel fired booster heater exhaust bracket.
 - ▶ Tighten the bolt to 10 Nm (7 lb.ft).
5. Install the power steering fluid reservoir.
6. Install the fender splash shield. For additional information, refer to (Section 501-02)
7. Refill and bleed the cooling system. For additional information, refer to (Section 303-03)

- 8 . Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)