

# How to cable factory BT module (including MOST bus connector)




MOST bus connector  
(with dust cap)

C2777 electrical  
connector


# BT Module Connector C2777

- C2777-17 & C2777-18 go to permanent battery feed
- C2777- 33 & C2777-34 provide ground
- C2777-16 provides switched positiv (ignition)

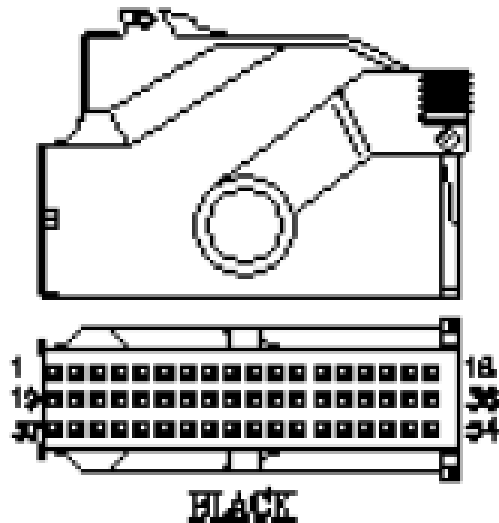


# Switched power from Infotainment Relais

- C2819 pin 11
- Color “U” blue
- Connect to C2777-16  
(Ignition of Bluetooth module)

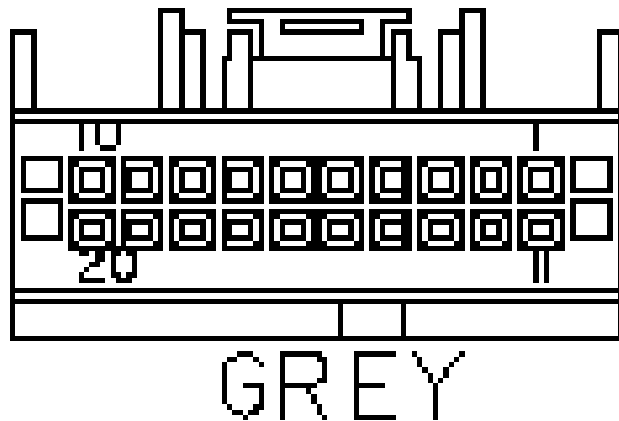

# Permanent power from Radio (C1354)

- C1354 pin 11
- Color “PU” pink/blue
- Connect to C2777-17 and C2777-18 (vBatt of Bluetooth module)

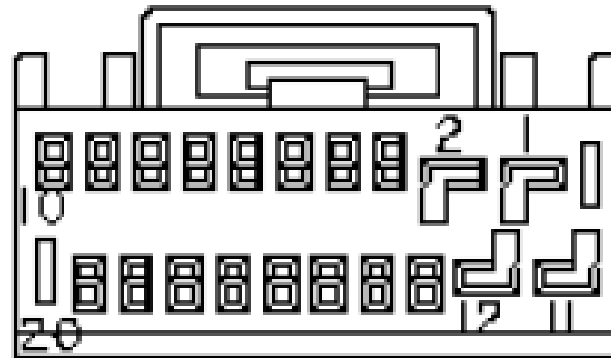

# Ground from Radio (C1354)

- C1354 pin 1
- Color “B” Black
- Connect to C2777-33 and C2777-34  
(Ground of Bluetooth module)

