




Windshield Wiper Motor (84.15.12)

Removal

1. Remove the plenum chamber panel. For additional information, refer to [Plenum Chamber \(80.15.62\)](#) (Section 412-01)
2. Remove the windshield wiper motor and linkage.
 - ▶ Remove the 2 bolts.
 - ▶ Remove the 2 clips.
 - ▶ Disconnect the electrical connector.

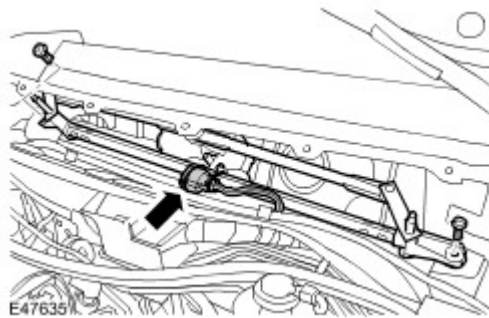

3. **NOTE :**
Do not disassemble further if the component is removed for access only.
Noting the fitted position, remove the wiper linkage.
 - ▶ Remove the 2 bolts.
 - ▶ Remove the nut.



Installation

1. Install the wiper linkage.
 - ▶ Tighten the bolts to 10 Nm (7 lb.ft).
 - ▶ Tighten the nut to 25 Nm (18 lb.ft).

2.



CAUTION: Make sure the windshield wiper motor is located on its stud prior to installing the

bolts.

Install the windshield wiper motor and linkage.

- ▶ Tighten the bolts to 6 Nm (4 lb.ft).
- ▶ Connect the electrical connector.
- ▶ Install the clips.

- 3 . Install the plenum chamber panel. For additional information, refer to [Plenum Chamber \(80.15.62\)](#) (Section 412-01)