

Front Seat Cushion (78.10.12/99)

Removal


NOTE :

In this procedure the cushion is removed as an assembly. There is a separate procedure showing removal of the cushion cover.

1 . Remove the front seat cushion assembly.

▶ Release and disconnect the 2 electrical connectors.

▶ Remove the 4 Torx bolts.

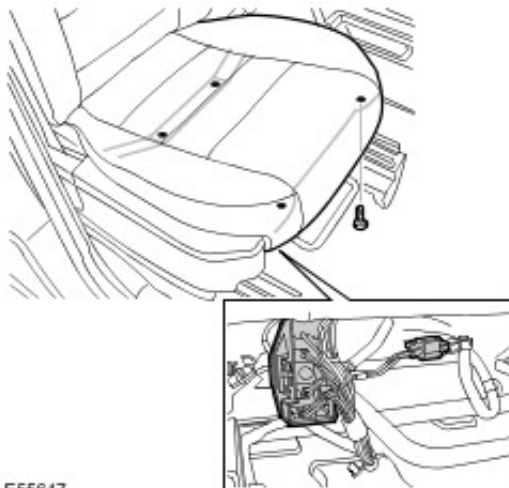

E55647

Installation

1 . Install the front seat cushion assembly.

▶ Tighten the Torx bolts to 25 Nm (18 lb.ft).

▶ Connect and secure the electrical connectors.