




## Rear Seat Cushion Cover - Vehicles With: 40/20/40 Split Seat (78.40.70)

### Removal

- 1 . Remove the outer backrest hinge cover.


 Fold the seat assembly forwards.


 Remove the screw.

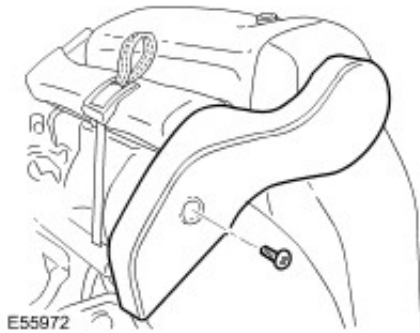

- 2 . Remove the inner backrest hinge cover.


 Release the backrest cover side clip.


 Release the 2 clips.

 Remove the screw.




- 3 . Remove the rear seat cushion side finisher.

 Remove the 2 screws.

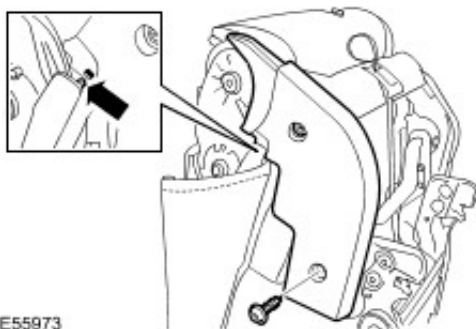


- 4 . Remove the seat rear release strap finisher.

▶ Remove the screw.

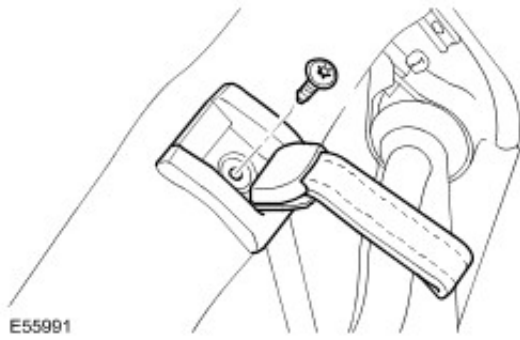


5 . Remove the seat front release strap finisher.

▶ Remove the screw.

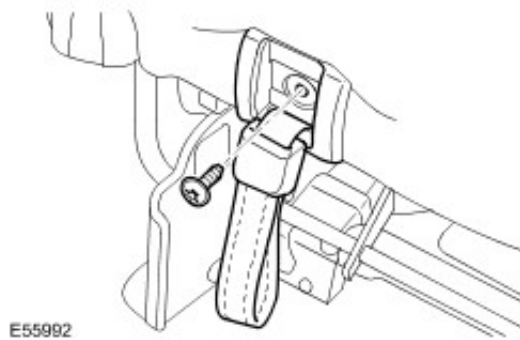

6 . Remove the seat cushion finishers.


▶ Remove the 2 screws.

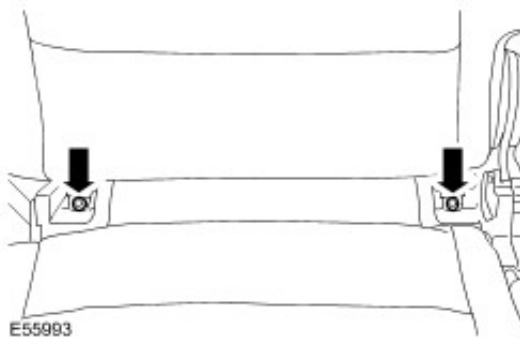

7 . Remove the rear safety belt buckle.

▶ Remove the Torx bolt.

▶ Release the spring.

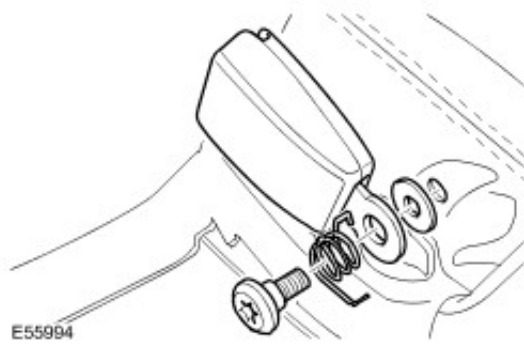


8 . Release the rear seat cushion cover.

▶ Release the 15 clips.



9 . Remove the rear seat cushion cover.

▶ Remove the 22 hog rings.

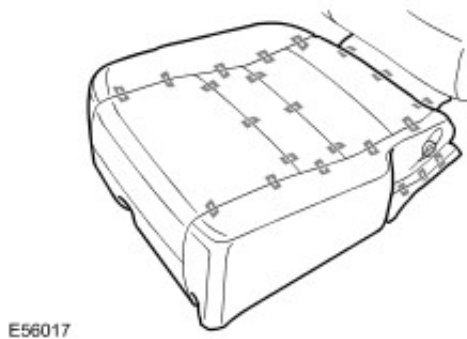

## Installation

1 . Install the rear seat cushion cover.

▶ Install the hog rings.

▶ Install the clips.

2 . Install the rear safety belt buckle.


▶ Attach the spring.


▶ Tighten the Torx bolt to 45 Nm (33 lb.ft).

3 . Install the seat cushion finishers.


▶ Tighten the screws.

4 . Install the seat front release strap finisher.


 Remove the screw.


 Tighten the screw.

5 . Install the seat rear release strap finisher.


 Tighten the screw.


6 . Install the inner backrest hinge cover.

 Attach the clips.


 Tighten the screw.

7 . Install the outer backrest hinge cover.

 Tighten the screw.

 Fold seat assembly rearwards.

8 . Install the rear seat cushion side finisher.

 Tighten the screws.