 



Air Suspension Control Module (60.50.04)

Removal

1. Driver side: Remove the cowl side trim panel. For additional information, refer to [Cowl Side Trim Panel \(76.13.27\)](#) (Section 501-05)
2. Remove the closing trim panel.
 - Release the clip.
 - Remove the 2 screws.
 - Disconnect the electrical connector.



 3. Remove the air suspension control module.
 - Disconnect the 4 electrical connectors.
 - Remove the bolt.
 - Release from the 2 clips.



Installation

1. Install the air suspension control module.
 - Secure with the clips.
 - Connect the electrical connectors.
 - Tighten the bolt to 9 Nm (7 lb.ft).

- 2 . Install the closing trim panel.
 - Connect the electrical connector.
 - Secure the clip.
 - Tighten the screws.

- 3 . Install the cowl side trim panel. For additional information, refer to [Cowl Side Trim Panel \(76.13.27\)](#)
(Section 501 -05)

- 4 . Initiate a new control module using T4.