
## **FBH System Component Location**

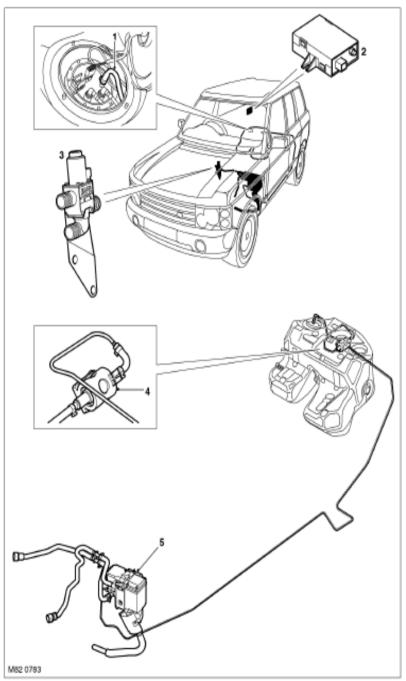

- FBH fuel pipe tank connection
  FBH receiver (where fitted)
  Changeover valve (where fitted)

- 4 FBH fuel pump
- 5 FBH unit