


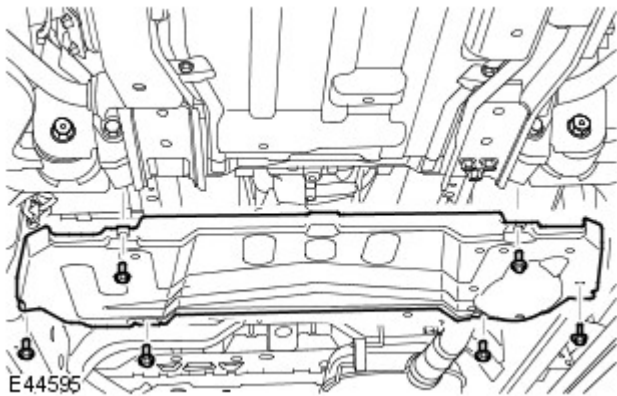
Automatic Transmission/Transaxle External Controls - V8 4.4L Petrol - Selector Lever Assembly

Removal and Installation


Removal

1.  **WARNING:** Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.


Raise and support the vehicle.



1. If installed, remove the transmission undershield.
 - Remove the 6 bolts.

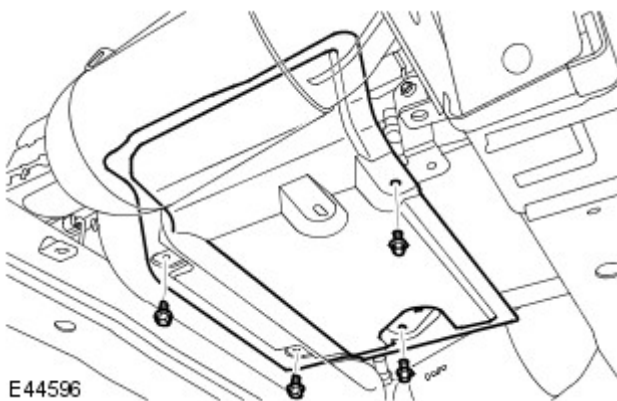


1. Remove the transmission heat shield.
 - Remove the 4 bolts.

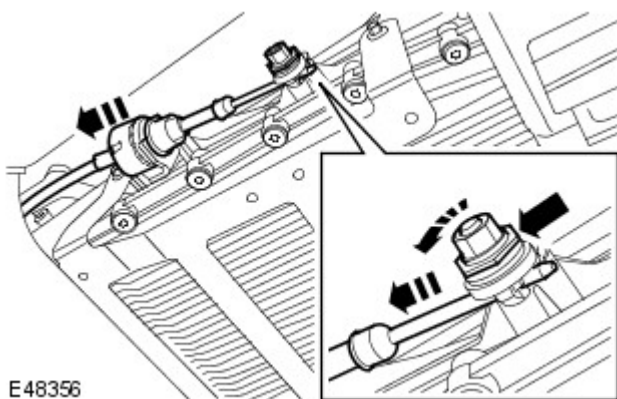


1. Release the selector cable.
 - Using an additional wrench, restrain the clamping bush and loosen the locknut.
 - Compress the latch and release the cable.

1. Release the selector cable from its guide bracket.

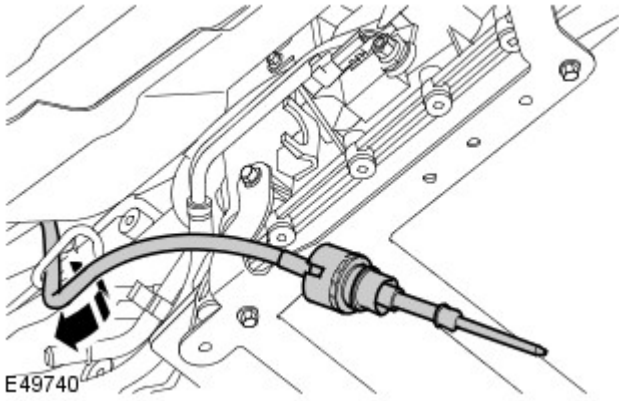

1. Remove the floor console upper trim panel.

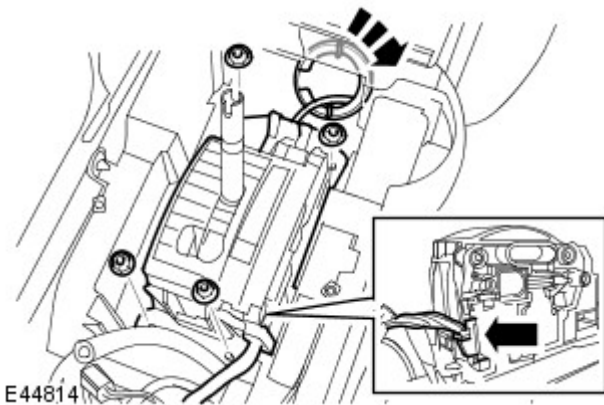

1. Remove the transmission selector lever.
 - Remove the 3 nuts.
 - Disconnect the electrical connector.
 - Release the selector cable from the body.

Installation

1. Install the transmission selector lever.
 - Secure the cable to the floor.
 - Connect the electrical connector.
 - Tighten the nuts to 8 Nm (6 lb.ft). Before VIN257100, discard old fixings.

1.  **NOTE:** Do not tighten the locking nut at this stage.

Connect the selector cable to the transmission.

- Engage the inner cable with the lever clamping bush.
- Connect the selector cable to its abutment bracket.

1. Position the selector cable to its guide bracket.

1. Install the floor console upper trim panel.

1. Adjust the selector cable.

1. Install the transmission heat shield.
 - Tighten the bolts to 10 Nm (8 lb.ft).

1. If installed, install the transmission undershield.
 - Tighten the bolts to 10 Nm (8 lb.ft).

