## **OPERATING INSTRUCTIONS**

From the main menu of the car system you will need to select TV then supply 12V+ to the BLUE switch cable (e.g. connect to remote out from DVD) to switch audio and video to your new external source. The switch wire will then need to be deactivated when you revert back to any of the other functions if you wish to listen to the audio from another factory source.







A/V INPUT & VIDEO IN MOTION
RANGE ROVER SPORT / LR3
With TV Tuner / DVD

NAV TV (Europe) LTD



# NAV TV (Europe) LTD

Distribution Centre Unit 21B Vale Business Park Llandow, Vale of Glamorgan CF71 7PF

Telephone: + 44 (0)8445 783 783 Fax: + 44 (0)1446 77 22 47

technical@nav.tv

## **LOCATION & REMOVAL**

Installation is made at the front monitor and radio.

Remove the radio surround trims and the radio top trim on Sport, then pull forward the leather side trims that cover the bottom screws of the air vents (circled below)

Remove the 4 screws holding the air vents and remove,

Remove the screen.

Access is now available to the rear of the radio to connect the supplied loom.

On LR3 you may remove the radio by removing the 4 screws and unit above housing hazard button.

Locate the plug in the radio shown in fig 2.





### INSTALLATION

### Installation for OPV-2LR (CAN):

Installation has to be done behind the RADIO at the large black plug.

Plug the black plug from the radio unit into the female side of the supplied harness, then plug in the male side of the supplied harness to the radio unit. Plug in and mount the interface.





### Installation for OPV-2LR (MOST)


Remove the GREEN plug from the GREEN socket on the screen unit,

Plug the GREEN plug into the male green socket supplied, next plug the supplied green female plug into the screen unit, see below



### INSTALLATION

Insert OPTICAL leads into OPV-2LR loom and car loom AT THE SCREEN/RADIO to create a loop, see diagram below

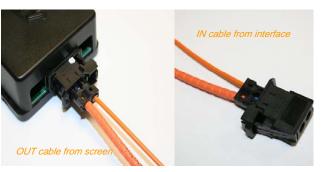

#### **INTERFACE**

CAR CONNECTOR

To remove the **(out)** fibre optic cable from the factory connector you will need to remove the black outer casing and push out the blue locking insert. You will need to do the same to insert the cable into the supplied loom. (shown in diagram above)

#### **Other Connections**

Connect the RED cable to 12v+ PERM

Connect the BLACK cable to 12v- GROUND

Connect the BLUE cable to 12v+ to switch from factory TV to your added source. Also see operating instructions.

Connect the cable AUDIO sockets to your audio source. See fig  $5\,$ 

Connect the cable VIDEO socket to your video source, see fig 5